




EZ-600-TM (stock code: 3190-418)

Type TNC-Male Plug
 non-solder center contact
 crimp-on (.610" hex.) outer contact


INSTALLATION INSTRUCTIONS

(Cable Types: LMR-600; 600 DB; 600 FR; 600 PVC)

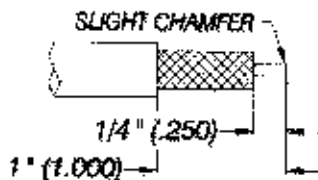

STEP 1

1. (A) Trim cable to dimensions shown using a razor knife.
- (B) Remove any residual plastic from center conductor.
- (C) Deburr center conductor using a fine file or Times DBT-01 tool.

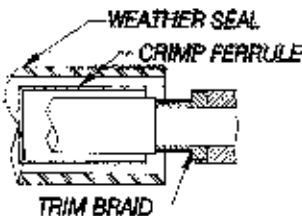

STEP 2

2. (A) Slide weather seal and crimp ring over cable.
- (B) Flare braid and insert cable into connector body until dielectric is seated with all braid wires on outside of connector body and aluminum tape inside connector body.
- (C) Trim excess braid flush to shoulder on connector.



STEP 3

3. (A) Slide crimp ring over braid and crimp as close to body as possible using a .610 hex. die in a Times HX-4 crimp tool or equivalent. Do not crimp rear of crimp sleeve.
- (B) Heat shrink weather seal over rear of connector body and down on to cable jacket using hot air gun.