THE REVISION STATUS OF ALL SHEETS OF THIS DRAWING IS THE SAME AS SHEET 1								
LTR	DESCRIPTION	DATE	BY					
-	Released	3/12/04	JCL					



P.O Box 5039 Wallingford CT 06492-5039 USA Tel (203) 949-8400 Fax (203) 949-8423 TIMES

mabiliation finalmet data for Connections

TNC (male) for cable LMR 400


Con. TNC (male) Crimp Right Angle for cable LMR 400 PN 3190-1515 (EZ-400-TM-RA) OF 23108

Recommended tools:

Knife

Crimp tool .429" hex die

Made in Brazil

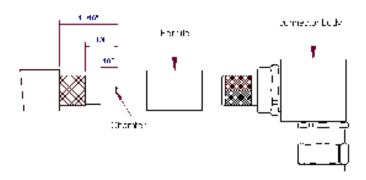

- 1. Slide femule onto cable.
- 2. Strip cable as shown.
- 3. Slide connector body under the braid.
- 4. Crimp the femule.

Unless otherwise specified, dimensions are in inches. Tolerances are applicable when specified in the specif	Annrovals			TIMES MICROWAVE SYSTEMS Wallingford, CT 06492				
ified.	Drawn	JCL	3/12/04	(203) 949-8400; (203) 949-8423.Fax www.timesmicrowave.com				
These drawings and specifications contain proprietary information				EZ-400-TM-RA Installation Instructions				
which is the property of								
Times Microwave Systems.				Size A	CAGE CODE 68999		Drawing No.: IN-1515	
				Sca	le: NA	Re	ev. (-)	Sheet: 1 of 1