



Clarity Series

50 GHz Test Cables




Applications:


- 5G development
- Research & Development Labs
- Bench VNA's and analyzers
- High Volume Production Test
- RF Module Testing

When everything is important, Times new Clarity™ Series is the clear choice. Industry-leading performance and unparalleled value.

- Broad Frequency Response
- Rugged & Durable
- Predictable over Temperature
- Solid Connector Retention
- RF Stable with Flexure
- Consistent between Batches
- Long Flex Life
- Ergonomically Designed
- Attractive Appearence

Ordering Information:

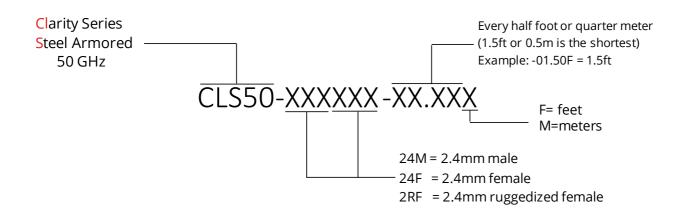

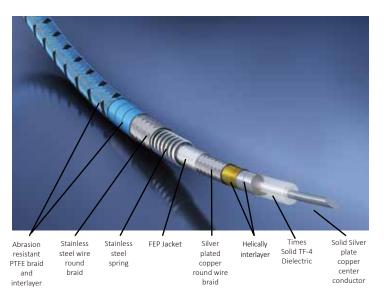

Connectors & Strain Relief:

- User friendly stainless steel SureGrip™ knurled coupling nut
- Unique, elliptical-shaped, Sure-Grip™ injected molded strain relief




Mechanical Specifications					
Dimensions	in	mm			
Armored Diameter: armor/strain relief	0.29 / 0.50	7.95 / 12.70			
Min bend radius, armored (max flex life)	1.5 (3.0)	38 (76)			
Crushing (armored version)	200 lbs/lin.in.				
Flex life ¹	50,000				
Temperature Range	-67°/+ 257°F	-55°/+125°C			


Electrical Specifications (50GHz)				
Impedance		50 Ohms		
Velocity of Propagation		70%		
Shielding Effectiveness		> 100 dB		
Capacitance		29pf/ft (95pf/m)		
VSWR (typ/max)		1.30:1 / 1.40:1		
Phase Stability (degrees)* typical	+/- 4.0		
Amplitude Stability (dB)	typical	+/- 0.08		
Attenuation, max	@77°F (25°C)	18 GHz	40 GHz	50 GHz
	dB/ft	0.93	1.50	1.72
	(dB/m)	(3.06)	(4.93)	(5.64)
Attenuation (per 100ft) at any frequency: 0.5556*√f(MHz) + 0.0008*f(MHz)				

1. As tested using Times' flex testing methods. 4ft long cable. Longer cables can have more total instability. Assumes test equipment is calibrated every 8 hours. New cables can have a break in period of several hundred flexes before optimum stability occurs. Contact your Times representative or the factory for a copy of this test procedure and/or actual test results.

Amplitude Stability while in motion

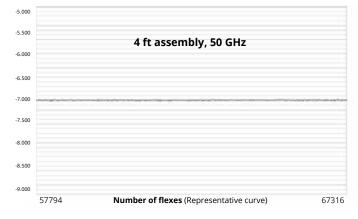

Phase Stability while in motion

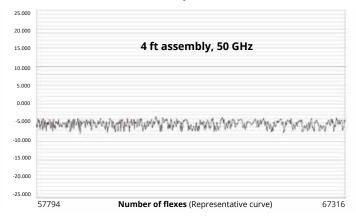

Always:

- · Inspect interfaces before every mate. Clean frequently
- · Gently start the coupling nut. Fully thread & tighten w/fingers first
- Use a calibrated torque wrench
- · Cap connectors and protect the assembly when not in use

Never:

- · Force the cable beyond the recommended minimum bend radius
- · Force two connectors. If any resistance is felt STOP and examine
- Mate connectors that have non-concentric contacts
- · Insert foreign or dirty objects into the interface

